

# FT-150 Low Zen Sphere Fountain

**Two people are recommended for the installation of this fountain!**



## Pump Kit Parts List

PK300 pump (1)  
#7 stopper (1)  
Approx. 6" length of 5/8" clear vinyl tubing (1) \*\*  
Wedges (2)  
Hose clamps (1)

\* Hose clamps may be used as flow restrictors  
\*\*Tubing is preassembled

## FOUNTAIN INFORMATION:

**This fountain holds approximately 12 gallons of water.**

**This fountain uses a medium fountain cover.  
(FTNCOV-MED)**

**Compatible with Refill #7 Device**  
(A different style stopper may be requested for this part.)

## TOOLS REQUIRED:

Bubble Level



## PUMP INFORMATION:

**290 GPH Pump**  
**15 FT cord length**

## - W I N T E R   C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

## - G E N E R A L   F O U N T A I N   T I P S -

**Install fountains on a level surface.** You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.  
For more Campania product information visit [www.campaniainternational.com](http://www.campaniainternational.com)

**All of our cast stone is proudly**




**Made in USA**

# FT-150 Low Zen Sphere Fountain


**Two people are recommended for the installation of this fountain!**

Assemble your fountain on a level surface capable of holding a minimum of 421 pounds with an approximate 3 square foot footprint.

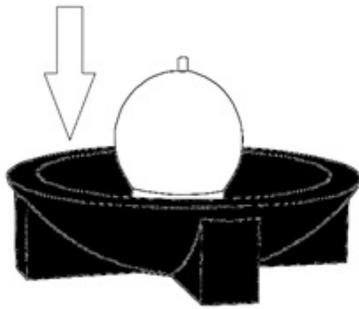


P-505 (285 lbs)  
39.5"W x 10"H

1. Position the basin (P-505) where the fountain is to be installed, ensuring that it is level.
2. Assemble the fountain plumbing
  - a. Attach the 5/8" clear tubing to the pump outlet.
  - b. Place the stopper around the pump cord approximately 8" from the pump.
3. Feed the pump cord all the way through the hole in the basin and run the cord through the channel in the bottom to ensure the fountain will be level.
4. **FIRMLY** press the stopper into the hole evenly.
  - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.

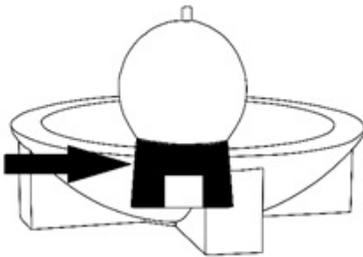


FT-150B (15 lbs)  
11"W x 5.75"H

5. Place the pump cover (FT-150B) over the pump. Ensure it is placed properly and leveled.

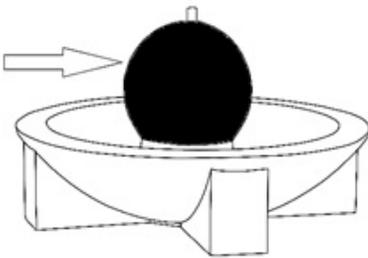

FT-150A (121 lbs)  
12.5"W x 14H

6. Position the water feature (FT-150A) on top of the pump cover.
7. Connect the loose end of the tubing to the pipe protruding from the bottom of water feature (FT-150A).
8. Ensure the water feature is centered and leveled on the pump cover.

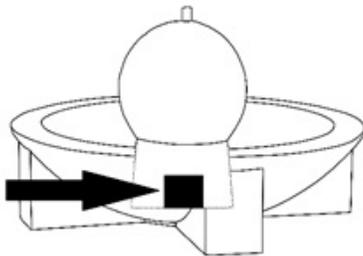

FT-150C (3 lbs)  
6"L x 1.5"W x 3.75"H

9. Place the pump cover door (FT-150C) in the pump access opening of the pump cover (FT-150B).
10. Fill the fountain with water.