

FT-240 Three Tier Longvue Fountain

Three people are recommended for the installation of this fountain!



FOUNTAIN INFORMATION:

This fountain holds approximately 21 gallons of water.

**This fountain uses a medium fountain cover.
(FTNCOV-MED)**

**Compatible with Refill #10 Device and LED Kit
(A different style stopper may be requested for the refill kit.)**

Pump Kit Parts List

PK800 pump (1)
#10 stopper (1)
#7 Drain stopper with wing nut (1)
Approx. 2" length of 3/4" clear vinyl tubing (1) **
Approx. 2" length of 5/8" clear vinyl tubing (1) **
Approx. 80" length of 1/2" black non-kink tubing (1) **
7 1/2" length of 1 1/2" PVC pipe - stand pipe (1)
Wedges (4)
Hose clamps (3)

* Hose clamps may be used as flow restrictors

**Black non-kink tubing and clear vinyl tubing have been preassembled

TOOLS REQUIRED:

Bubble Level



PUMP INFORMATION:

**290 GPH Pump
15 FT cord length**

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise, components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to ensure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

Check out YouTube for a "How to" video.

For more Campania product information visit www.campaniainternational.com

All of our cast stone is proudly



Made in USA

FT-240 Three Tier Longvue Fountain

Three people are recommended for the installation of this fountain!

Assemble your fountain on a level surface capable of holding a minimum of 1052 pounds with an approximate 2.75 square foot footprint.



FT-239J (242 lbs)
20"L x 20"W x 12"H

1. Place the base (FT-239J) into position where the fountain will be installed, ensuring that it is level.
 - a. **Note: Check that all components are leveled as the fountain is assembled.**



FT-239I (141 lbs)
15.75"W x 18.5" H

2. Center the large pedestal (FT-239I) over the base.



3. Assemble the fountain plumbing
 - a. Attach the 3/4" clear tubing attached to the non-kink tubing to the pump outlet.
 - b. Place the stopper around the pump cord approximately 8" from the pump.
4. Center the large bowl (FT-239H) over the large pedestal (FT-239I) making sure the holes line up.
5. Feed the pump cord all the way through the holes in the bowl (FT-114F) and pedestal (FT-239I) then out of the access door in the base (FT-239J).
6. **FIRMLY** press the stopper into the hole evenly.
 - a. Note: Using the handle of a screwdriver or hammer works best to press the stopper in place.




FT-239H (465 lbs)
48"W x 12"H

7. Position the medium pedestal (FT-239F) over the pump in the large bowl (FT-239H).
8. Feed the non-kink tubing connected to the pump through the top of the medium pedestal (FT-239F).



FT-239F (59 lbs)
12.75"W x 14.25"H

9. Center the medium bowl (FT-239E) over the medium pedestal (FT-239F).
10. Insert the standpipe into the middle bowl (FT-239E).
 - a. Feed the fountain tubing through the stand pipe as it is fixed into the bowl.

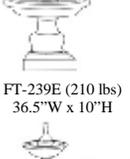

FT-239E (210 lbs)
36.5"W x 10"H

11. Position the small pedestal (FT-239C) over the center of the medium bowl (FT-239E).
12. Feed the non-kink tubing through the hole in the center of the small pedestal (FT-239C).



FT-239C (28 lbs)
9.25"W x 13.5"H

13. Using a hose clamp, secure the loose end of the non-kink tubing to the pipe protruding from the bottom of the small bowl (FT-225B).
14. Center the small bowl (FT-225B) over the small pedestal (FT-239C).



FT-225B (55 lbs)
21.5"W x 6.75"H

15. Fit the finial (FT-239A) into the small bowl (FT-225B) by feeding the protruding copper pipe from the bowl into the hole in the bottom of the finial.



FT-239A (14 lbs)
5.5"W x 13.5"H

16. Place the small pump cover door (FT-239D) into the small pedestal (FT-239C).
17. Place the large pump cover door (FT-239G) into the medium pedestal (FT-239F).



FT-239D&G (2 lbs)
Pump house doors

18. Fill the fountain with water.