

F I- 194 Zen 100 Fountain (5 pieces) COMPONENTS AND PARTS LIST

Revised October 25, 2017




A-427 (x2)
13"L x 6"W x 12"H
21 Lbs



FT-194A
12.25" x 2.25" H
10 Lbs



FT-194B
7.5" x 5" H
11 Lbs

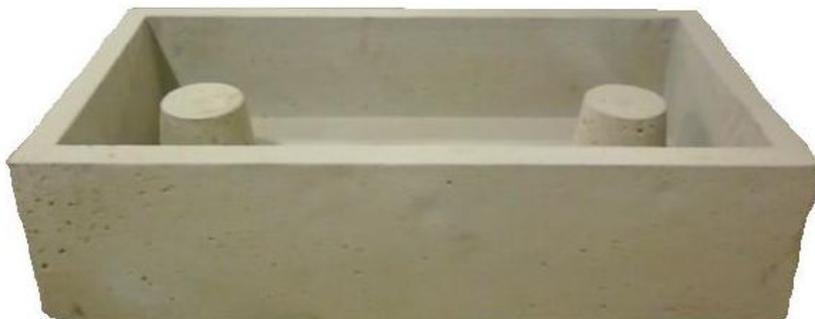

FT-194C
33"L x 18.25"W x 8.25"H
203 Lbs



This fountain
uses cover
FTNCOV-SM

Fountain holds
approximately 6.5
gallons of water


NOTE: Component photos are not to scale

Pump Kit Parts List

PK140 pump (1)
#10 stopper (1)
Approx. 8" length of 1/2" Black Non-Kink tubing (1) **
Approx. 2" length of 5/8" clear vinyl tubing (1) **
2" length of 1/2" CPVC Pipe (1) **
Hose clamps (3)
Note – Hose clamps may be used as flow restrictor

Tools you will need

Level

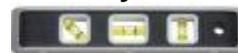

FT- 194 Zen Too Fountain (5 pieces) ASSEMBLY INSTRUCTIONS

Revised October 25, 2017

1. Make sure you are assembling your fountain on a level surface capable of holding a minimum of 321 pounds with approximately a 4 square foot footprint.
2. Place the Basin (FT-194C) into position where the fountain will be installed.
3. This fountain will need to be installed on a surface capable of holding a minimum of 321 pounds in approximately a 4.25 square foot area.
4. Feed the pump cord through the hole in the basin leaving enough cord length to work with the pump outside the pump cover.
5. To ensure a level installation, bring the pump cord out through the channel in the bottom of the Basin.
6. Place the #10 rubber stopper around the pump cord and into the stopper hole allowing enough cord to easily move the pump.
7. Pull the pump cord all the way through the bottom of the basin.
8. To ensure a level installation, bring the pump cord out through the channel in the bottom of the basin.
9. Make sure the appropriate 1/2" diameter enclosed fitting (the one shown in the middle of Fig A is inserted into the pump water outlet. Fittings are found in the pump box.
 - a. Remove the small fitting as shown in Fig B.
10. Insert the 1/2" fitting into the hole in the pump as shown in Fig C. Place a hose clamp over the 1/2" black non-kink end of the tubing assembly.
11. Connect that end of the tubing to the pump outlet. Tighten the hose clamp to ensure a good seal.
12. If you wish to use one of the hose clamps as a flow restrictor, you must install it on the tubing at this point.
13. Place the pump cover (FT-194B) over the pump. Ensure it is centered and leveled.
14. Insert the CPVC end of the tubing assembly into the bottom coupling in the water feature. Tighten the hose clamp to ensure a good seal.
15. Place the Water Feature (FT-194A) on top of the pump cover. Ensure it is centered and leveled.
16. Place a frog onto each one of the pedestals built into the bottom of the basin.
17. Fill the basin with approximately 6.5 gallons of water.
 - a. NOTE: Do not run fountain without sufficient water. If the pump is allowed to run dry, it can damage the pump.

Fig A



Fig B



Fig C



WINTER CARE AND GENERAL FOUNTAIN INSTRUCTIONS

- W I N T E R C A R E -

Fountain bowls/tops and other fountain components, which collect water, should not be left outside in the winter since any component, which fills with water and freezes may crack. Likewise components such as pedestals, which remain in a basin, filled with water, which then freezes, may also crack or crumble. Ideally, therefore, a fountain should always be stored indoors or in a dry protected place such as a covered porch away from the elements. However, if a fountain must be left outside:

- (1) Remove pump, rubber stoppers, drainpipes, finials, and other small components for storage indoors. Note that stoppers or drainpipes are removed to allow drainage in the event water accumulates in any basin.
- (2) Raise fountain base from ground with wood strips so that base will not freeze to the ground surface.
- (3) Cover or wrap the fountain with burlap or other absorbent material (old blanket or towel) and then cover securely with plastic, making sure that water will not accumulate in the basin or other fountain component and freeze;
- (4) Check fountain periodically to insure that plastic is secure and water is not accumulating in any fountain component.

- G E N E R A L F O U N T A I N T I P S -

Install fountains on a level surface. You will need a properly grounded 110-volt (AC only) GFCI protected receptacle near the fountain for your pump. All pumps are submersible and must be completely underwater to function properly. Test all pumps and adjust to full output prior to assembly. It is not recommended that fountains be placed directly on grass or dirt. Position the channel opening at the base of each fountain toward the electrical outlet to be used since the pump cord will be threaded through this opening.

For more Campania product information visit www.campaniainternational.com

All of our cast stone is proudly



Made in USA